


**ASSEMBLY INSTRUCTIONS – ROOF MOUNT INSTALLATION
COTTAGE SIZE WEATHERVANES**

WEATHERVANE ASSEMBLY




1.
Position brass ring over rod.




2.
Slide large ball down rod to brass ring.

3. Interlock directionals... slide on rod.

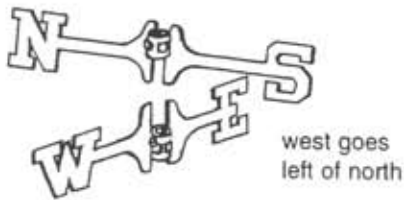

4. Slide small ball on rod...rest on directionals.

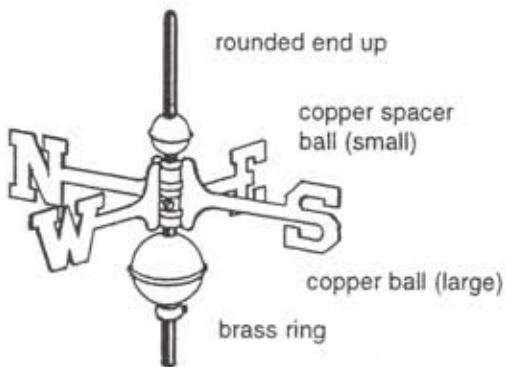

rounded end up

copper spacer ball (small)

copper ball (large)

brass ring

copper bottom of weathervane



5. Slide weathervane onto rod.

Slide weathervane and retaining hook* onto rod simultaneously.

copper bottom of weathervane




Tighten set screw.

retaining hook

*Retaining hook included with and required for 3-dimension

YOUR PACKAGE INCLUDES

- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Weathervane Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Retaining Hook (if required)
- 1 Adjustable Roof Mount

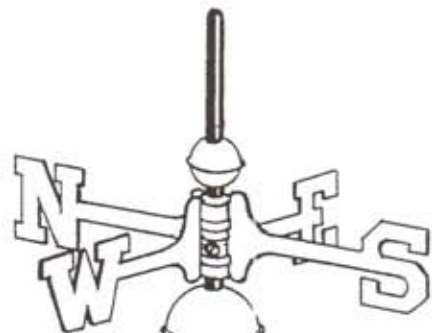

ROOFMOUNT

Adjust roof mount to conform to your roof.



Drill 3/32" holes using roofmount as a template. Fill holes with silicone caulk and drive in 1 1/4" screws provided. Check