


**ASSEMBLY INSTRUCTIONS**  
**FULL SIZE WEATHERVANES**  
 (with retaining hook)

COPPER SPACER BALL (SMALL)



BRASS DIRECTIONALS

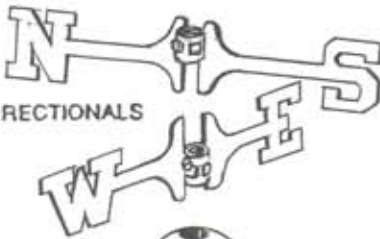

COPPER BALL (LARGE)



**YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:**

- 1 Figure
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Retaining Hook
- 1 Tube of Loctite®


SMALL ROD

BRASS RING  
 LARGE ROD (18")

ASSEMBLED VIEW




1



POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW

2

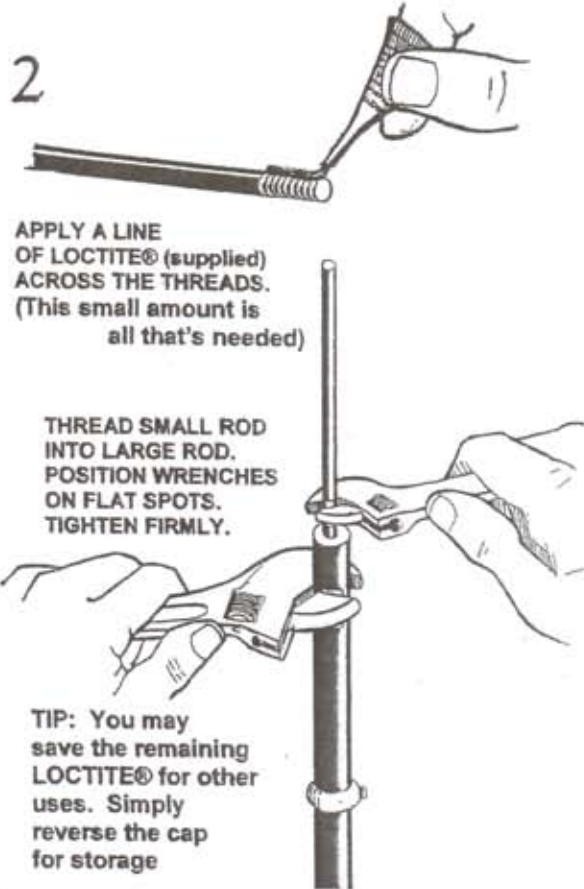


APPLY A LINE OF LOCTITE® (supplied) ACROSS THE THREADS. (This small amount is all that's needed)

THREAD SMALL ROD INTO LARGE ROD. POSITION WRENCHES ON FLAT SPOTS. TIGHTEN FIRMLY.

TIP: You may save the remaining LOCTITE® for other uses. Simply reverse the cap for storage


3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

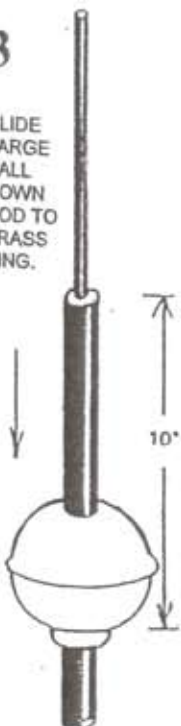

4

INTERLOCK DIRECTIONALS. SLIDE ONTO ROD. TIGHTEN SET SCREWS

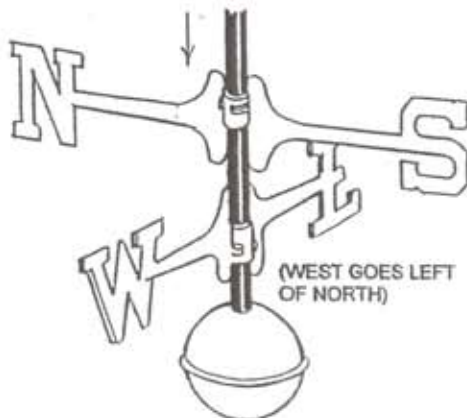

Brass bottom of weathervane

Retaining hook.

5

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY.

SLIDE WEATHERVANE AND RETAINING HOOK ONTO SMALL ROD SIMULTANEOUSLY. TIGHTEN SET SCREW.

